


Following manufacturers instructions iron on the vilene onto the wrong side of each fabric piece. I found ironing from the fabric side with a steam iron was better.

Take the 2 larger pieces and fold in half on the long side to find the centre and mark this point on the bottom edge, if you have directional fabric this is important to get your pattern the right way up.



This can be marked with a pin or a small pencil mark.



Using a ruler place 2 more markers in the following positions

Large container	4 1/2 inches either side of the centre marker
Medium container	3 3/4 inches either side of the centre marker
Small container	3 inches either side of the center marker


Take the outer fabric piece and fold in half right side together and stitch down the short end with 1/4 Inch seam.

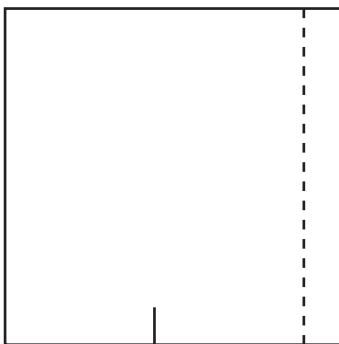

Do the same to the inside fabric, leaving a 3 inch gap in the seam on the bottom half of the seam.

These will form the sides of your container.

Take one of the bases and line up the markers on the base with markers on the side panel, the fourth marker on the side panel will be the seam. Pin these first with the pin heads sticking out as per the diagram.

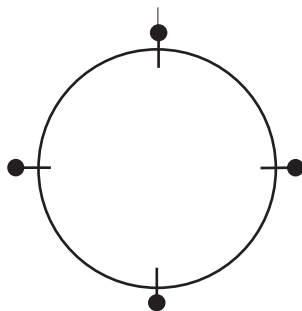

Continue to pin in this way all the way round the base with the pins approx 1/2 inch apart.

The more pins the better the curve of the base.

Stitch around the base. This is easier if you have the circle base on the bottom when you put it in the machine. If you are careful you can sew over the pins or you can pull them out as you go.

Make both up the same way.